

# PARTS LIST



JB200	Housing (order by machine size)
JB201	Short Bushing
JB201-O	O-Ring
JB201-U	U-Cup
JB202	Long Bushing
JB202-O	O-Ring
JB202-U	U-Cup Seal
JB203	Drive Gear
JB204	Dowel Pin
JB205	Screw
JB206	Cover (order by machine size)
JB207	Screw
JB208	Screw
JB209	Arm Stud
JB210	O-Ring
JB211	Wear Ring
JB211-O	O-Ring
JB213	Set Screw
JB214	Post
JB215	Post
JB216	Post
JB217	Post
JB218	Cover
JB219	Bearing
JB220	Screw
JB221	I-Bar (order by machine size)
JB222	J-Bar (order by machine size)
JB223	Air Distributing Head (order by machine size)
JB224	Head Fitting (same as J-29)
JB225	Screw
JB226	Washer
JB227	Head Shaft
JB228	O-Ring (same as J-23)
JB229	Wear Ring (same as J-14)
JB229-O	O-Ring
JB230	O-Ring
JB231	Screw
JB232	Dowel Pin
JB233	Oil Fitting

