



PARTS LIST

Part Number	Description
J-1	Tong Holder (Female)
J-2	Tong Holder (Male)
J-3	Shaft (order by machine size)
J-4	Links
J-5	Link
J-6	Pin
JS-8	Bracket Plate (order by machine size)
JS-8A	Tong Holder Guide
JS-9	Cylinder Mounting Spacer
JS-9A	Locating Spacer
J-10	Screws
J-11	Cylinder
J-12	Spring
J-13U	Piston Assembly
J-14	Piston Ring
J-14U	U Cup Seal
J-15	O-Ring
J-16U	Cylinder Cap
J-22	Air Distributing Head (order by machine size)
J-23	O-Ring
J-24	Cylinder Shaft (order by machine size)
J-25	Screws
J-26	Sprocket
J-27	Screws
J-28	Air Block (order by machine size)
J-29	Head Fitting
J-30	Air Block Fitting (order by machine size)
J-30U	U Cup Seal
JS-31	Center Section (order by machine size)
J-50	Tong Holder Bolt

